## Electric Temperature and Pressure Gauges

- 1. Disconnect ground cable from battery.
- 2. Gauges: oil pressure, fuel level and temperature.

Connect voltage to "I" terminal. Connect sender switch fo "S" terminal. Connect ground to "G" terminal.

3. Meters


Hour Meters: Ground (—) terminal (negative ground system). Apply voltage to (+) terminal.

Voltmeters: Connect voltage to "I" terminal. Ground "G" terminal (negative ground system).

(negative ground system).

Ammeters: Connect "S" terminal to battery. Connect "I" terminal to alternator/regulator (negative ground system).

4. Reconnect ground cable to battery.

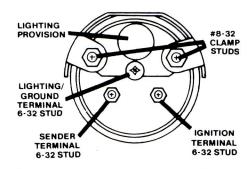

 When connected, as shown, the pointers move when current (power) is applied. All instruments also deliver proof of operability.

